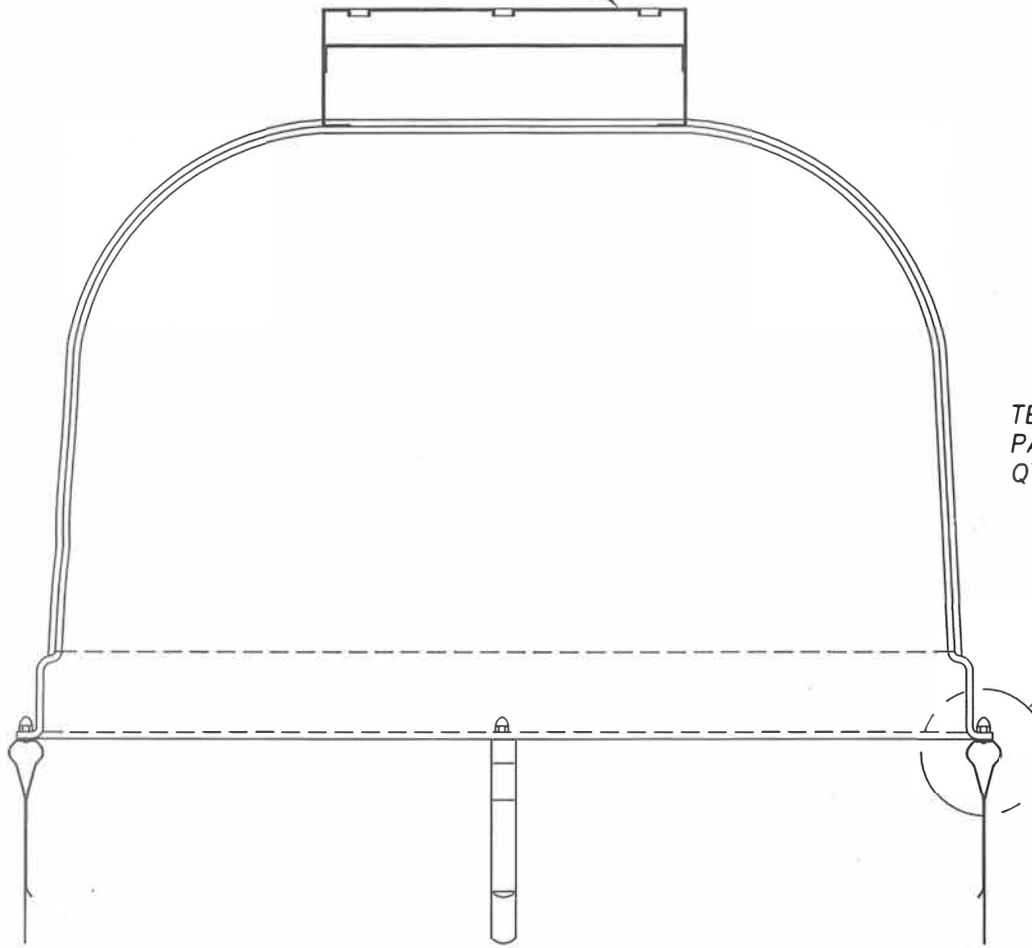COTTON CANDY DISPLAY RACK
(NOT INCLUDED WITH BUBBLE)
MODEL NO. 3940

ACORN NUT #8-32
PART NO. 47702
QTY. 3

CLIP-ON BUBBLE

TEE BOLT #8-32
PART NO. 75267
QTY. 3

CLIP, WHIRL GRIP
PART NO. 42397
QTY. 3

DETAIL "A"

INSTRUCTIONS:

1. Install the mounting hardware as shown in the above illustration at the three hole locations. (Do not tighten nuts)

2. Rotate the clips so they follow the curve of the floss pan.

3. Tighten acorn nuts with a 5/16" nut driver or wrench.

4. Gently place the floss bubble on your floss pan.

CLIP-ON FLOSS BUBBLE MODEL 3938

8/31/10 REVISED 5/16" WAS 11/32"

RENTAL-WORLD